

 
- ⑤ Plug the power cord into an indoor socket.
- ⑥ Turn the main switch of the charging cart on.



CHARGING MODE SWITCHING

Charging cart with three charging modes:

- ①. Timer charging: the customer can set multiple sets of charging times according to their needs, see timer manual for detailed operation.
- ②. Delayed power on: factory default state, when the main switch is opened, there will be a 1 second interval between power on at each level to prevent transient currents from being too high and causing tripping.
- ③. Cycle charging: When the total power is too high, the circuit breaker will trip, in which case you need to switch the charging cart to cycle charging by following the written instructions on the charging cart to switch the mode switch.

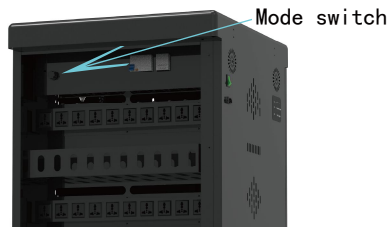

AFTER SALES SERVICE

The following conditions are not covered by the after-sales service:

- ① Damage caused by improper use, maintenance or storage;
- ② Damage caused by self-modification;
- ③ Damaged after purchase due to dropping and during installation;
- ④ Damage caused by force majeure factors such as earthquakes, fire, lightning strikes, abnormal voltages and secondary disasters.

 
Formcase INSTRUCTION MANUAL

MODEL

T30

LIST OF ACCESSORIES

- Power cord*1
- Keys*2
- Instruction manual*1
- Velcro*30

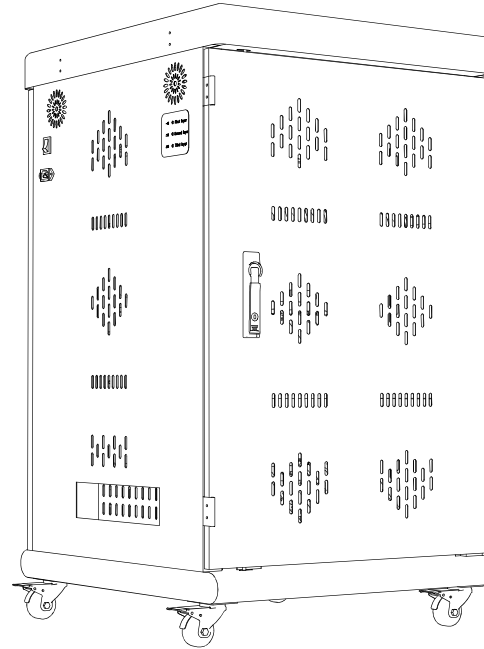


CAUTIONS

Please read this instruction carefully before installation and use, and check whether the electrical socket is grounded. If it is not grounded, there is a risk of leakage. Do not install this machine near the window to avoid corrosion of the body caused by exposure and rain, and keep away from possible damage to ensure rechargeable vehicle service life. Due to the continuous upgrading and transformation of the product appearance, there may be some differences between the physical object and the manual picture, and the user is responsible for the damage caused by improper operation.


- ◇ Unauthorized maintenance personnel shall not disassemble the circuit part of the cart;
- ◇ Unauthorized maintenance personnel shall not replace the internal electrical appliances of the cart;
- ◇ It is strictly forbidden to sprinkle water, oil and other liquid into the cart;
- ◇ It is forbidden to climb and stand on the cart;
- ◇ It is strictly forbidden to deeply rotate fans and sockets such as fingers and bamboo strip.
- ◇ Do not hang on the door to prevent personal injury from the door pulling or the charging cart tipping over.

 PRODUCT DESCRIPTION

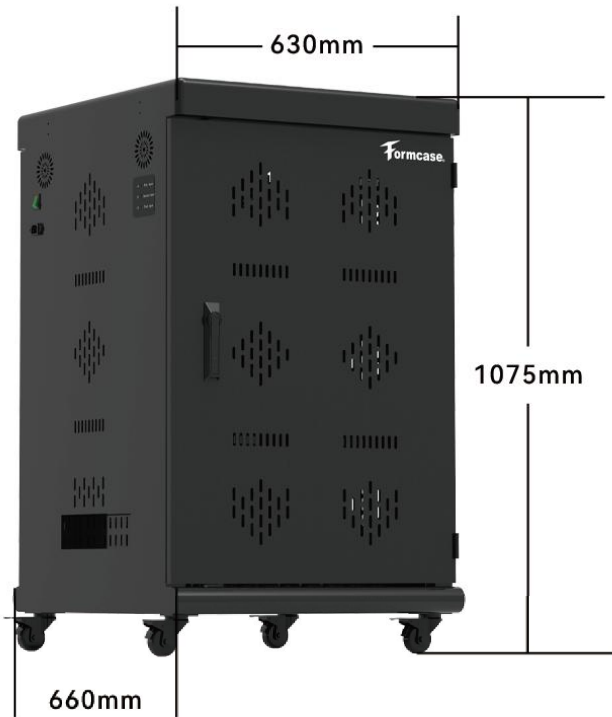

OPERATION STEPS

 - ① Before operation, turn off the power switch to ensure that the device is not powered on.
- ② Open the rear door, insert the computer adaptor plugs one by one into the sockets and place the adaptors in the corresponding storage slots.

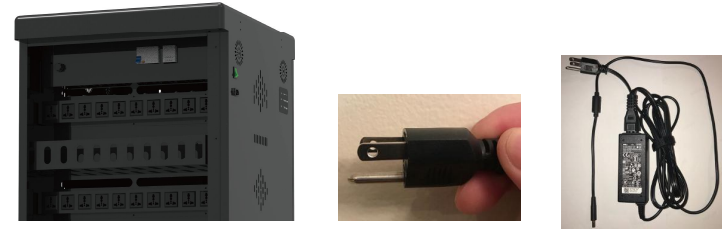

- ③ Pass the adapter charging head through the square hole in the rear wall of the charging cart, then wrap the charging cable around the compartment's cable slot and finally plug the charging head into the computer charging port.
- ④ Follow the steps below to connect the computer to the charging cabinet in turn, then close the front and rear doors.

