


AFTER SALES SERVICE

The following conditions are not covered by the after-sales service:

- ① Damage caused by improper use, maintenance or storage;
- ② Damage caused by self-modification;
- ③ Damaged after purchase due to dropping and during installation;
- ④ Damage caused by force majeure factors such as earthquakes, fire, lightning strikes, abnormal voltages and secondary disasters.

Formcase INSTRUCTION MANUAL

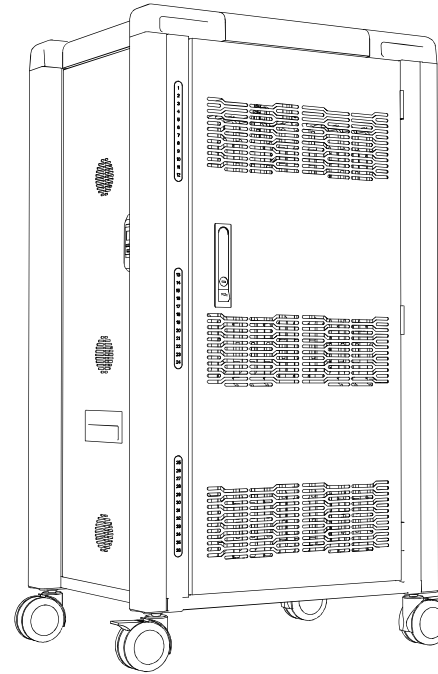

MODEL

T36 (18W)
T36 (45W/60W)

LIST OF ACCESSORIES

- Power cord*1
- Keys*2
- Instruction manual*1
- Charging cable*36

SPECIFICATIONS

- Voltage: AC200~230V 50Hz
- Current: 10A
- 18W Output: 5V/3A 9V/2A 12V/1.5A
- 45W Output: 5V/3A 9V/3A 12V/3A
15V/3A 20V/2.25A
- 60W Output: 5V/3A 9V/3A 12V/3A
15V/3A 20V/3A

CAUTIONS

Please read this instruction carefully before installation and use, and check whether the electrical socket is grounded. If it is not grounded, there is a risk of leakage. Do not install this machine near the window to avoid corrosion of the body caused by exposure to rain, and keep away from possible damage to ensure rechargeable vehicle service life. Due to the continuous upgrading and transformation of the product appearance, there may be some differences between the physical object and the manual picture, and the user is responsible for the damage caused by improper operation.

- ◇ Unauthorized maintenance personnel shall not disassemble the circuit part of the cart;
- ◇ Unauthorized maintenance personnel shall not replace the internal electrical appliances of the cart;
- ◇ It is strictly forbidden to sprinkle water, oil and other liquid into the cart;
- ◇ It is forbidden to climb and stand on the cart;
- ◇ It is strictly forbidden to deeply rotate fans and sockets such as fingers and bamboo strip.
- ◇ Do not hang on the door to prevent personal injury from the door pulling or the charging cart tipping over.

PRODUCT DESCRIPTION



OPERATION STEPS

- ① Before operation, please turn off the power switch to make sure that the equipment is not powered on.
- ② Open the front door and put the computer into the slot one by one.
- ③ Open the front door and put the computer into the slot one by one.
- ④ Close the cabinet door and open the switch. The front door indicator lights up, the charging shows a red light, full shows a green light.

Note: if the equipment is not powered on, check whether the circuit breaker behind the equipment trips. If it trips, press the blue button of the circuit breaker, close it, and then connect the power supply.

